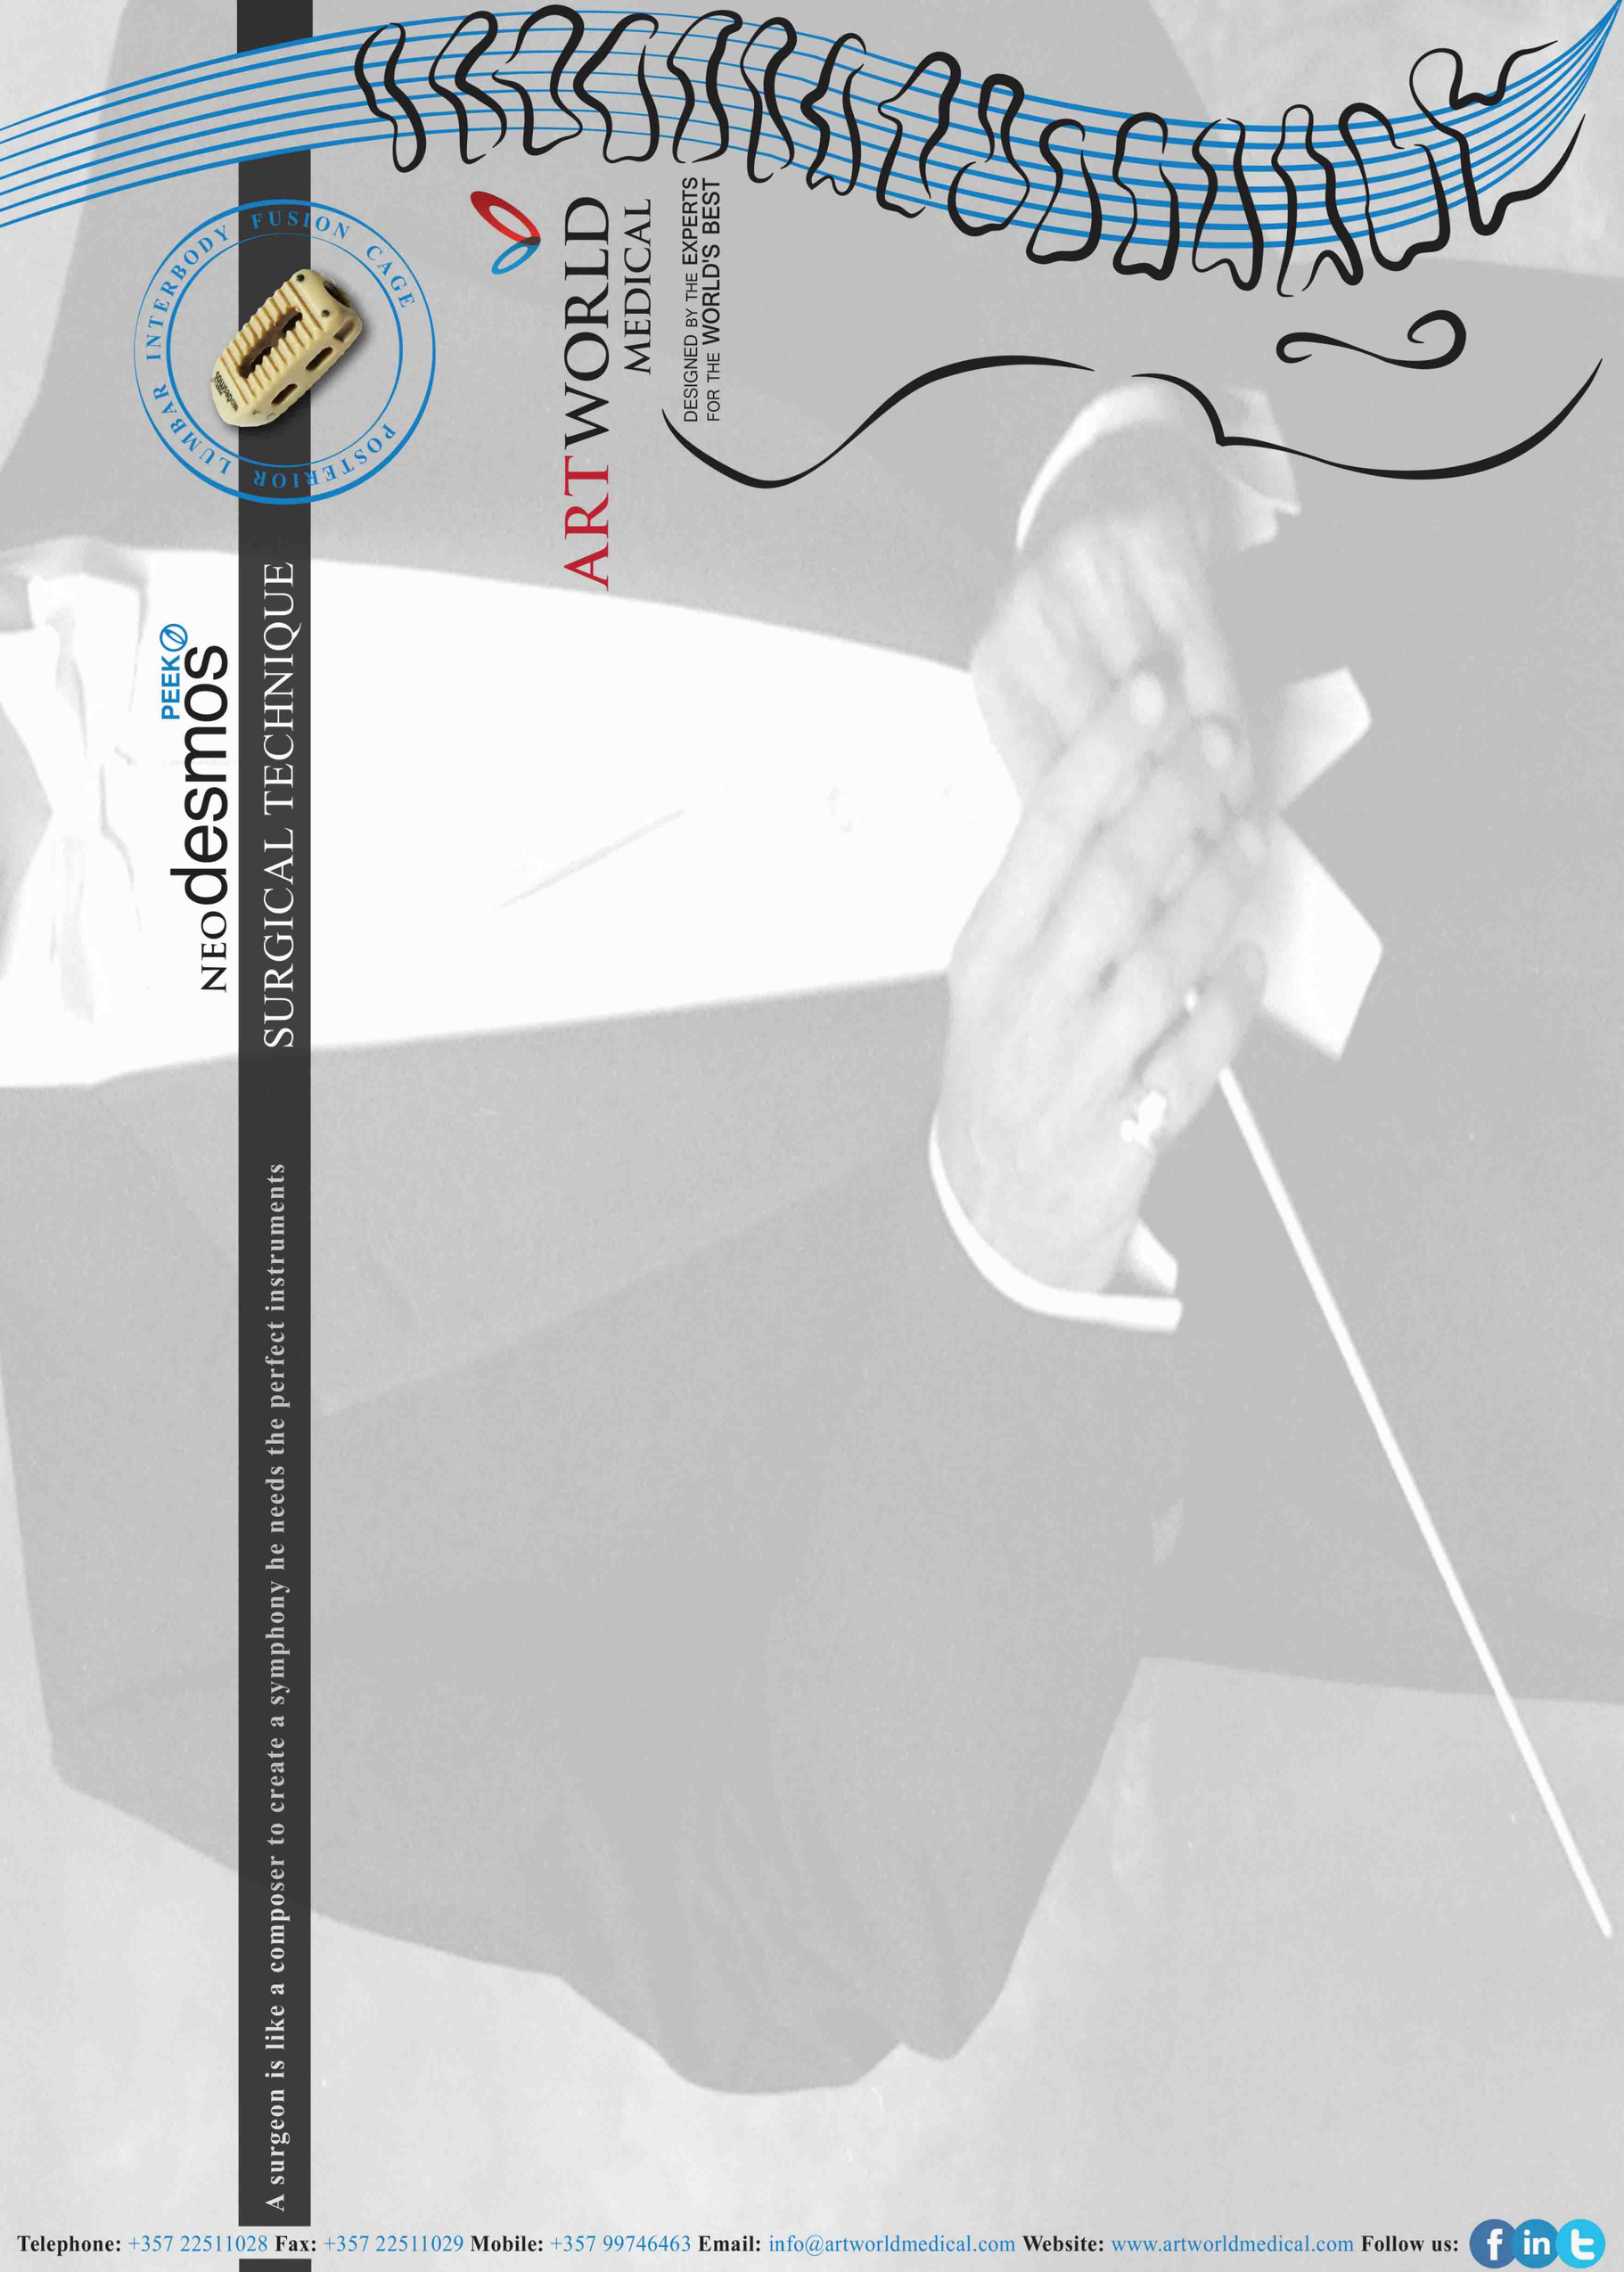


**Telephone:** +357 22511028 **Fax:** +357 22511029 **Mobile:** +357 99746463 **Email:** info@artworldmedical.com **Website:** www.artworldmedical.com **Follow us:**

# CONTENTS


- **Product Sizes & Codes** ..... 03
- **General Product Information** ..... 03
- **Instrument Set** ..... 04
- **Procedure** ..... 05 - 10
  - **1** ..... 05
  - **2** ..... 05
  - **3** ..... 06
  - **4** ..... 07
  - **5** ..... 07
  - **6** ..... 07
  - **7** ..... 08
  - **8** ..... 09
  - **For extraction** ..... 09
- **X-rays** ..... 11

## PRODUCT SIZES & CODES

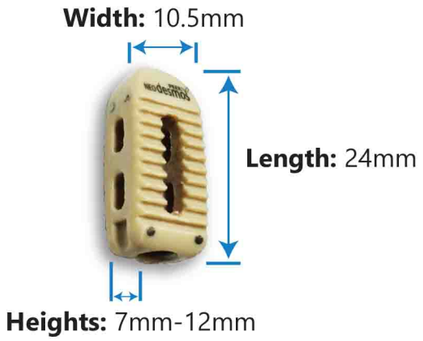


| Height | Length | Width | Codes |
|---|---|---|---|
| 7mm-12mm | 24mm | 10.50mm | NDP2407-NDP2412 |

Sterile - single use

## GENERAL PRODUCT INFORMATION

### POSTERIOR LUMBAR INTERBODY FUSION CAGES

- Atraumatic edge protects nerve roots
- Big central canal and side holes for bone graft
- Excellent stabilization with additional fixation
- Full range of sizes
- Sterile implants

## INSTRUMENT SET

### INNOVATIVE, EASY TO USE IMPLANTATION INSTRUMENT SET

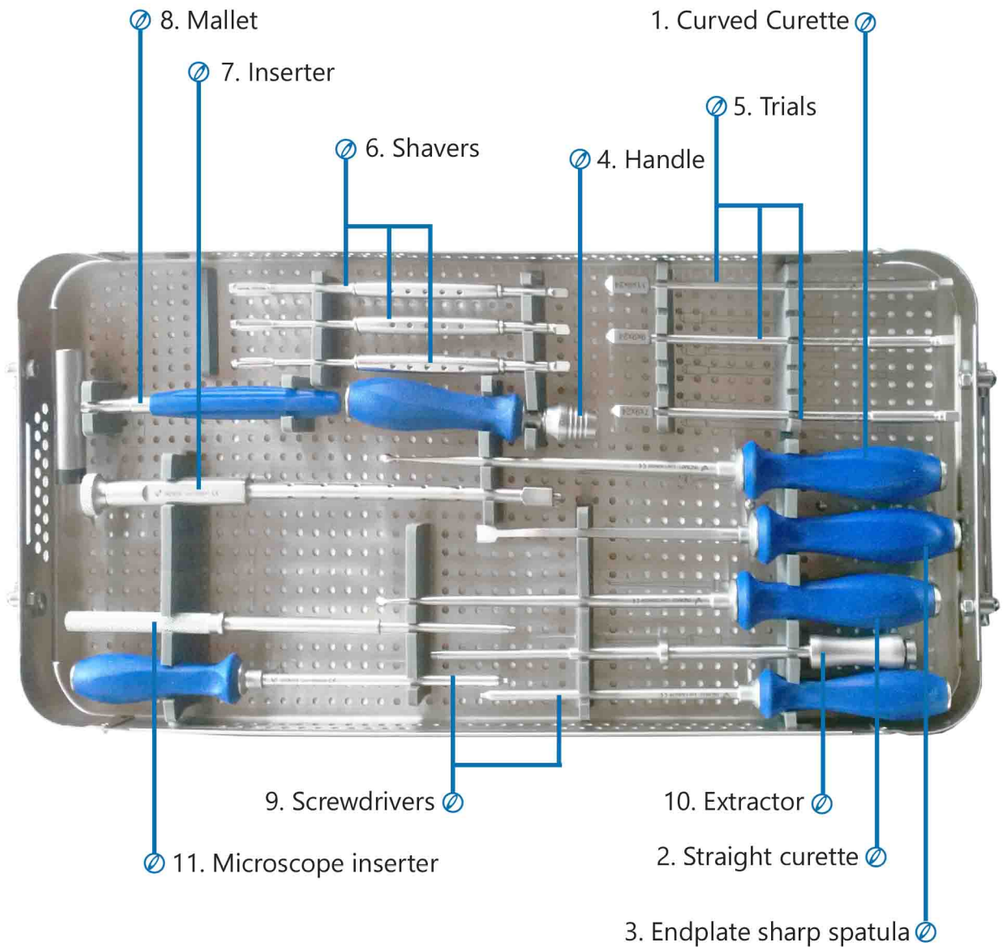

# PROCEDURE

**1:** Perform the discectomy from one side (the most symptomatic side)

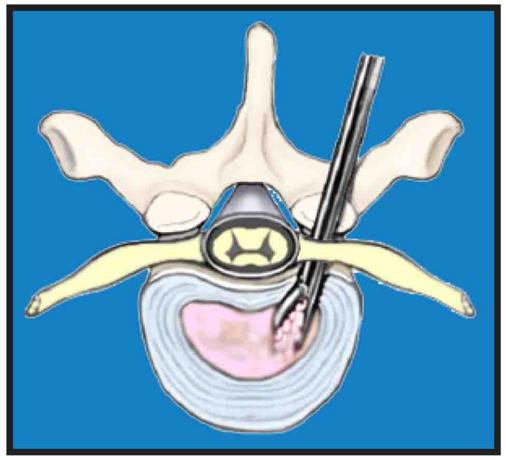

**2:** Use the Curette (1, 2) to remove any remaining particles of disc

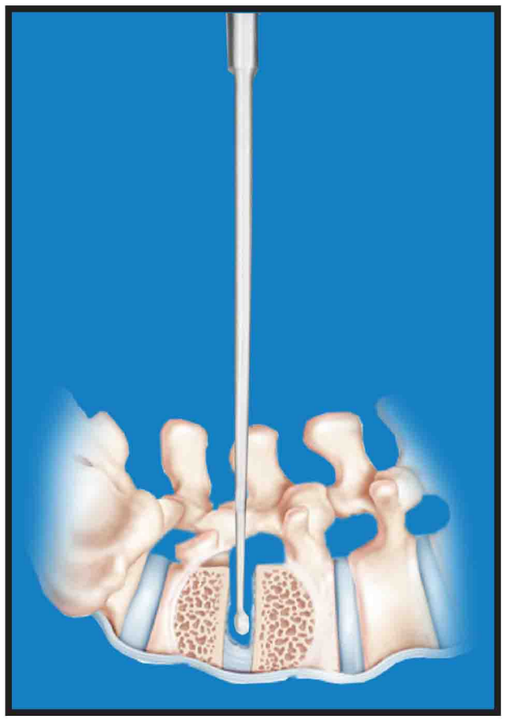

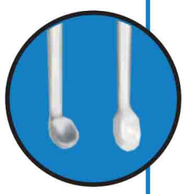

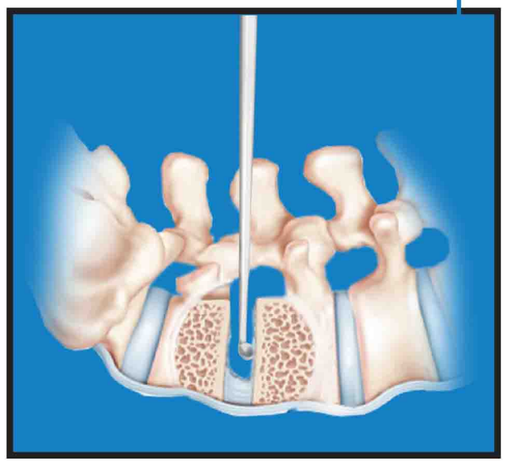

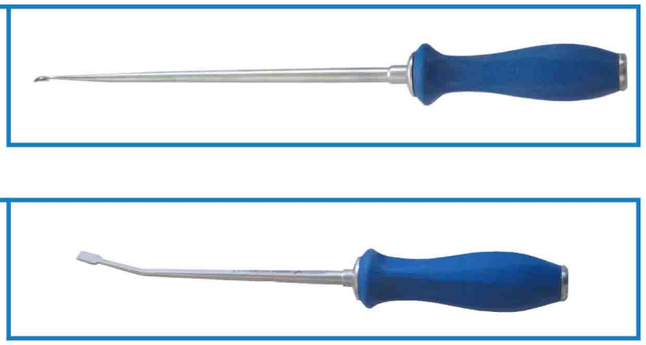



1. Curved curette

2. Straight Curette

3. Endplate sharp spatula

**3:** If considered necessary, use the endplate sharp spatula (3) to prepare the surface of the vertebral endplates

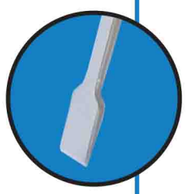

**4:** Insert trials (4,5) one by one starting with the smallest to find the implant size

**5:** Once the size is ascertained insert the corresponding shaver **Note Surgeon's technique prefernce:** If preferred, step 5 can be performed before step 4

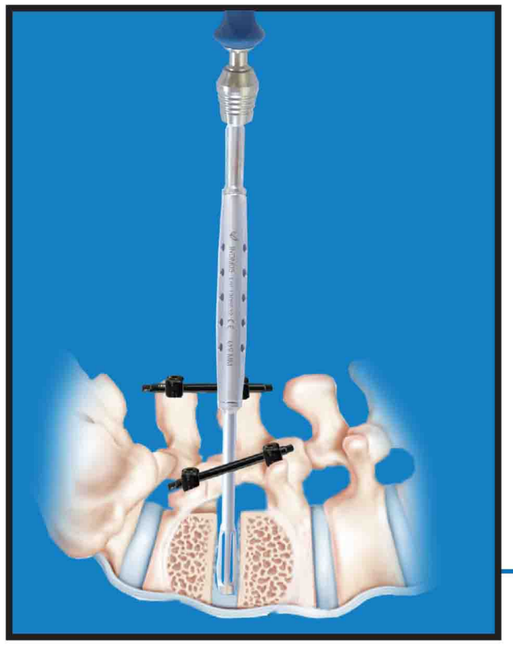

**6:** Repeat steps 1 to 5 on the other side

4. Handle
5. Trials
6. Shavers
7. Inserter
8. Mallet

**7:** Firstly, fill the implant with bone pieces harvested during laminectomy and/or synthetic bone substitute. Then, load the implant to the inserter (7) and position in vertebra space on the one side. **IMPORTANT NOTE:** check with the aid of fluoroscopy to ensure that the implant has good contact with endplates. If it does not have good contact, try to insert the biggest size (never smaller) Use the mallet (8) (tap with the pvc side) to drive the implant into position, if it is needed. Check under fluoroscopy control that the implant is correctly positioned.

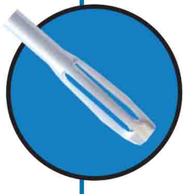

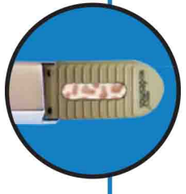

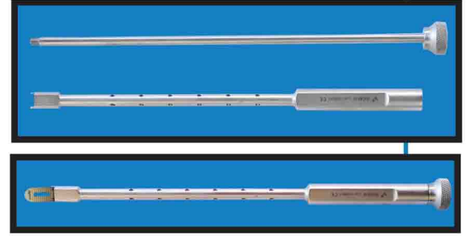

**8:** Repeat steps 6 and 7 on the other side

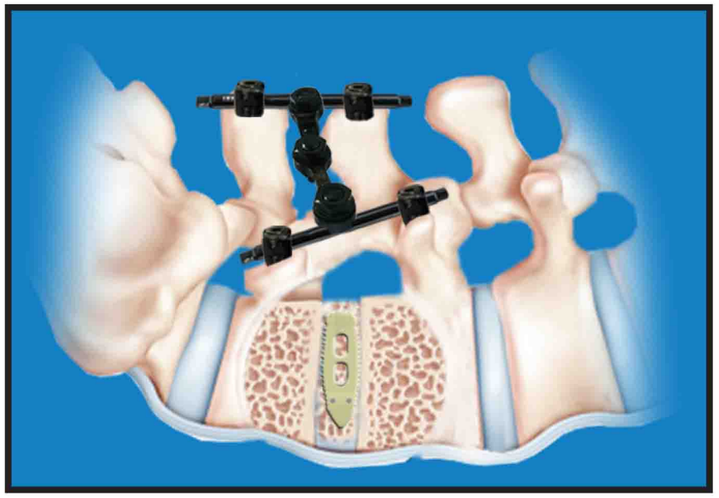

**For extraction:** Remove the implant using the extractor (10)

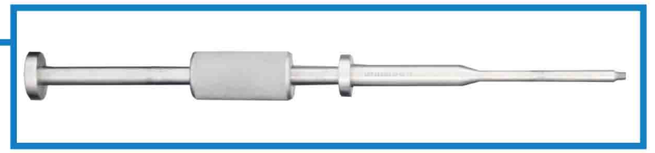

10. Extractor

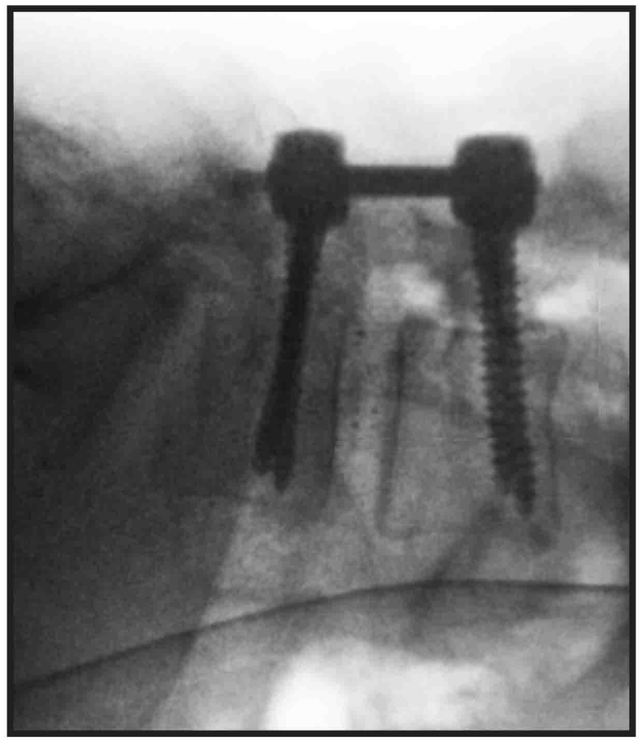

ARTWORLD MEDICAL

**Distributor:**

**Telephone:** +357 22511028 **Fax:** +357 22511029 **Mobile:** +357 99746463 **Email:** info@artworldmedical.com **Website:** www.artworldmedical.com **Follow us:**